


# PS2, PS2 V PLEATED INSECT SCREEN

## 1. MEASUREMENT

### 1.1. Measurement for reveal

Measure the width and height of the opening to which the screen is to be inserted. Measure in three places, record the smallest measurement.


VÝŠKA V – HEIGHT H  
ŠÍŘKA Š – WIDTH W

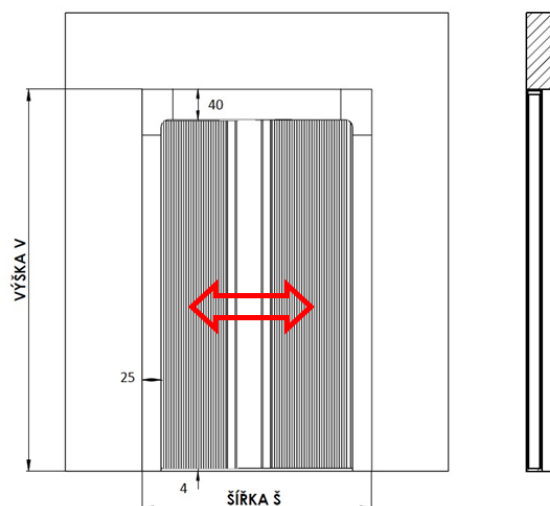

### 1.2. Measurement for frame

Measure the outer dimensions of the screen.

The standard delivery of the screen includes the 10×20 mm profile which may serve as a false sill. It is not part of the screen manufacturing height.

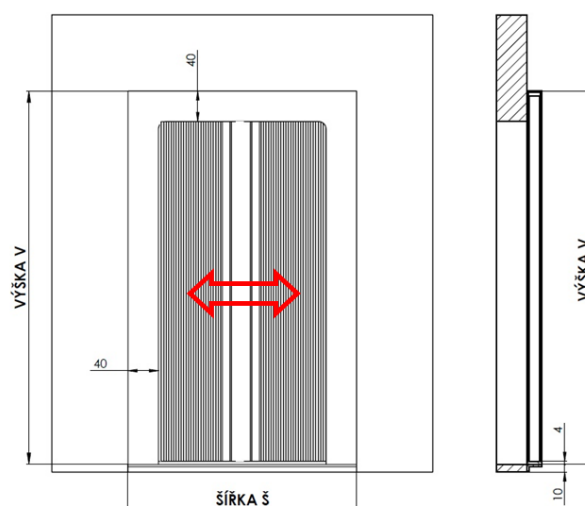

## 2. INSTALLATION

### 2.1. INSTALLATION TO REVEAL

#### 2.1.1. Installing the frame


Fit the plastic parts, see below, to the upper and lower profiles. Remove the protective film and attach the upper and lower profiles to the place of installation. Adjust any length deviations by moving the plastic corner pieces. The lower profile consists of two parts connected using the central plastic part.



Insert the side guide profiles to the plastic corner pieces, first to the upper profile, then to the lower profile, and fasten with the screws supplied.




### 2.1.2. Locking the moving rail

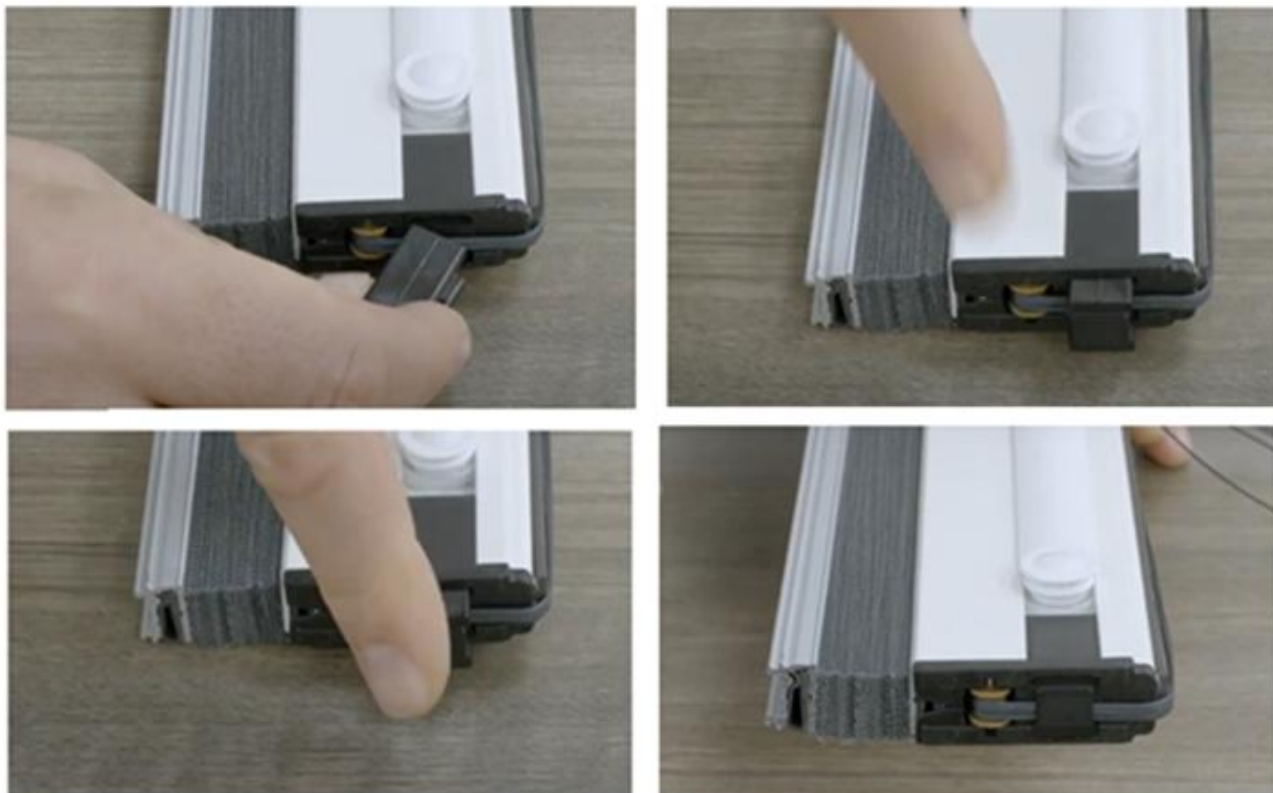

Fit the plastic component from below to the chambers of the lower carriage under the moving rail. The cords must be under the plastic!


### 2.1.3. Inserting and fastening the insect screen KIT

Insert both packets with the screen KIT in the upper and lower profiles. Move both packets with the screen to the side guide profiles. Push both packets with the screens to side profiles, until they fit to their desired places (all the way). Always start pushing from the bottom.


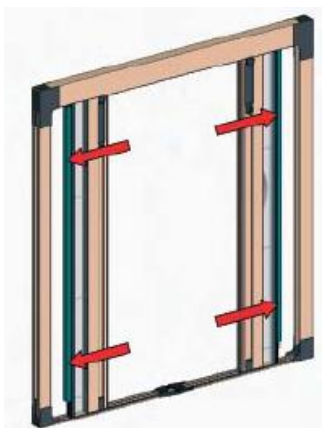


### 2.1.4. Inserting the cord stops

In the lower part, push the cord stops to their desired places in the central plastic part, see below. The lower cords have been manufactured to approximate lengths. If needed, redo the knot.

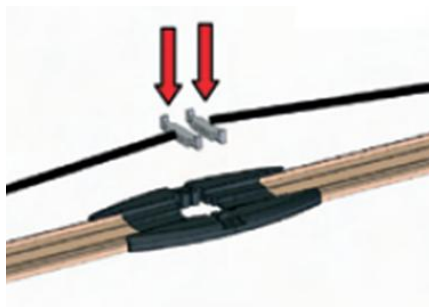


Insert the knots of the upper cords to the dedicated places in the cursors (black plastic part). The right-side cord is to be inserted in the left cursor, the left-side cord is to be inserted to the right cursor.

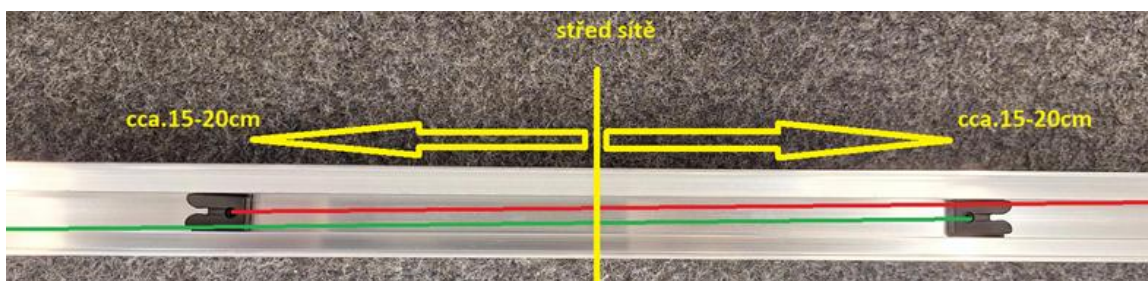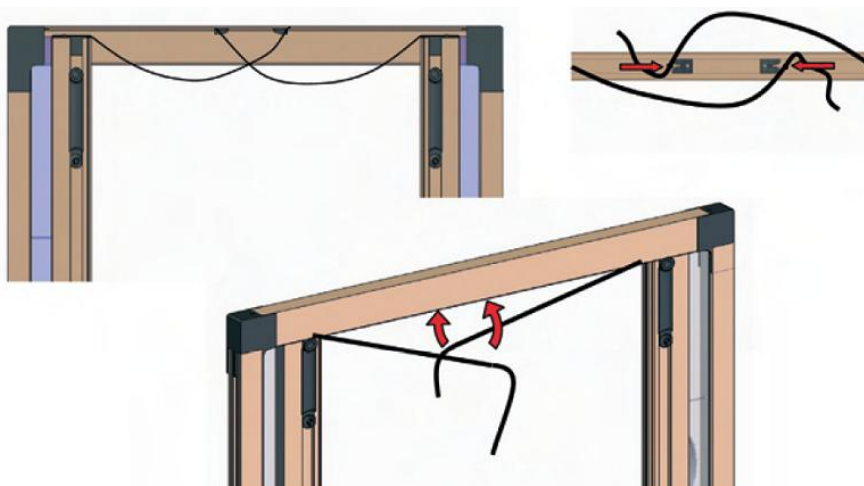

*střed sítě – screen centre*

### 2.1.5. Adjusting the cord


Use the Allen key supplied to loosen the cursor screws. Tighten the cords by shifting each cursor to the side profiles and then tighten the screws by the Allen key. Check movement of both screen parts. Having completed the screen adjustment, cut the excess cord.

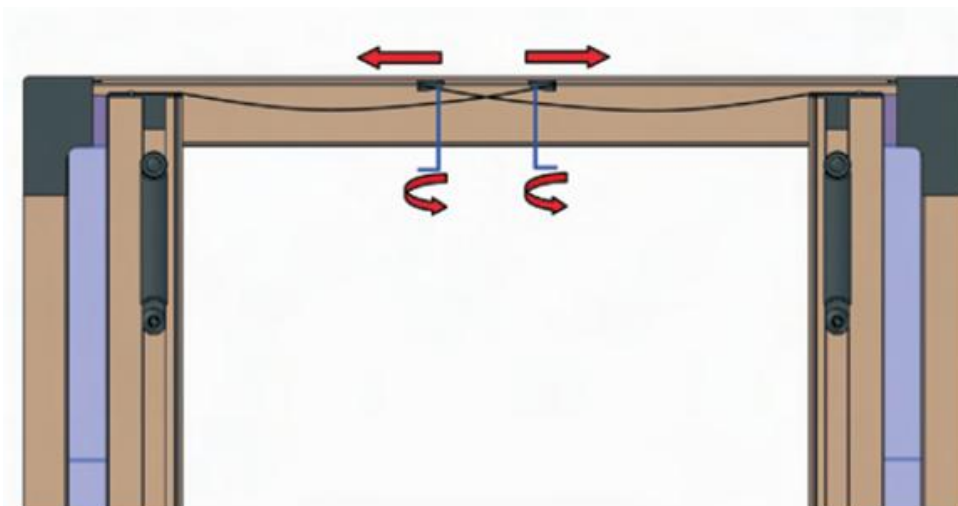


### 2.1.6. Plastic parts with springs

This component is recommended for doors that are not at right angles. If the door is at right angles, it is not necessary to use it.

Push the plastic profiles with springs to the upper part of the KIT profile. Slightly push the plastic part towards the upper profile edge and fasten with screws. The plastic profile must be elastic.

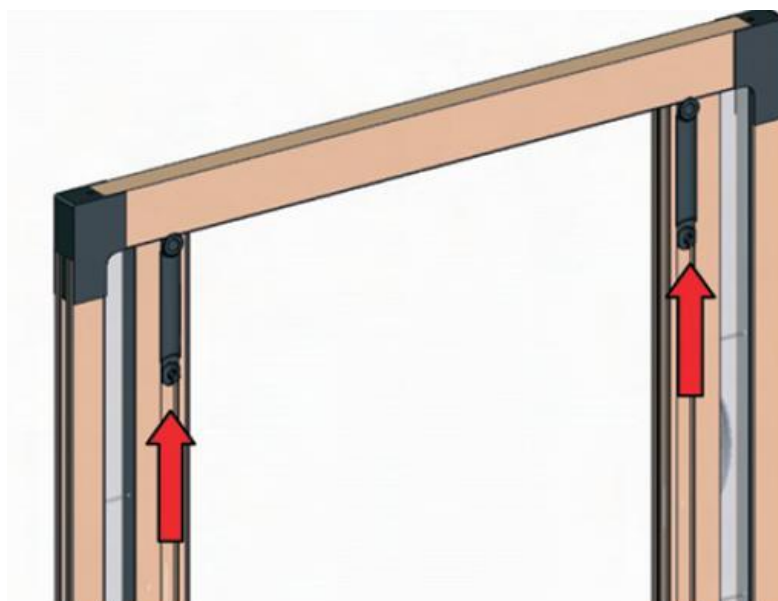

### 2.1.7. Testing the correct operation

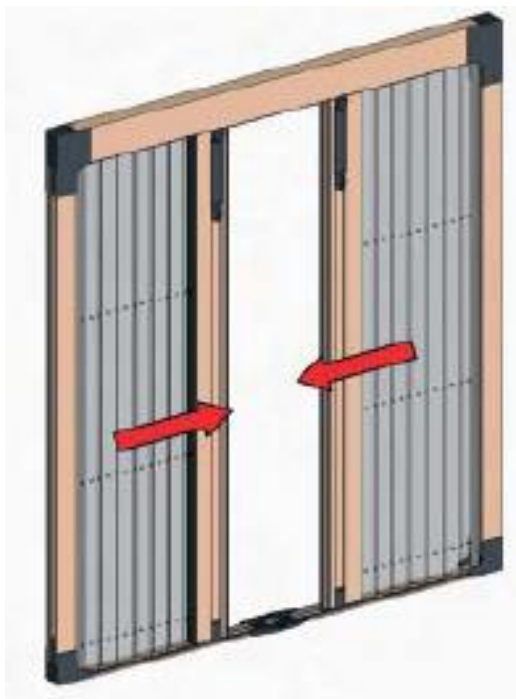

### 2.1.8. Covering the central plastic part



## 2.2. INSTALLATION TO FRAME

**2.2.1.** Insert the lower corner plastic part to the left starting profile.




**2.2.2.** Insert the upper corner plastic part to the left starting profile.




**2.2.3.** Insert the upper profile to the left corner plastic part.




**2.2.4.** Insert the upper corner plastic part to the upper profile.

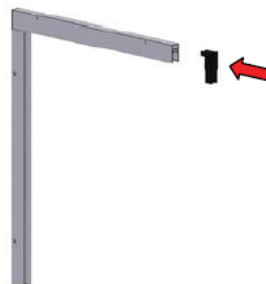


**2.2.5.** Insert the right-side profile to the corner plastic part.

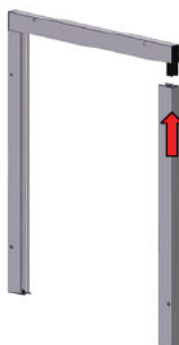


**2.2.6.** Insert the lower corner plastic part to the profile.

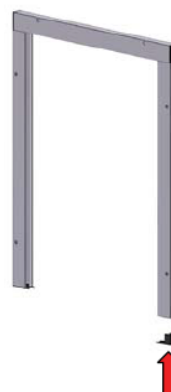


**2.2.7.** Fasten the frame to pre-drilled holes in the place of installation.

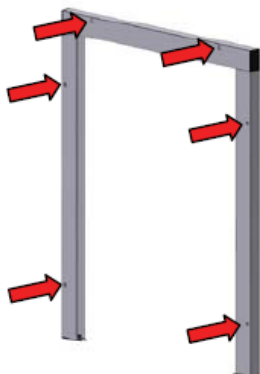

**2.2.8.** Place the lower profile to correct places of the lower plastic parts, fasten to the floor or the attached auxiliary AI profile. The lower profile consists of two parts connected using the central plastic part.

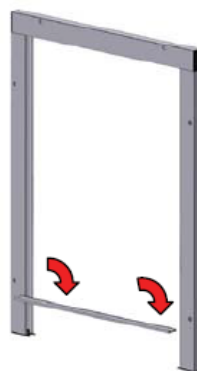


### 2.2.9. Locking the moving rail

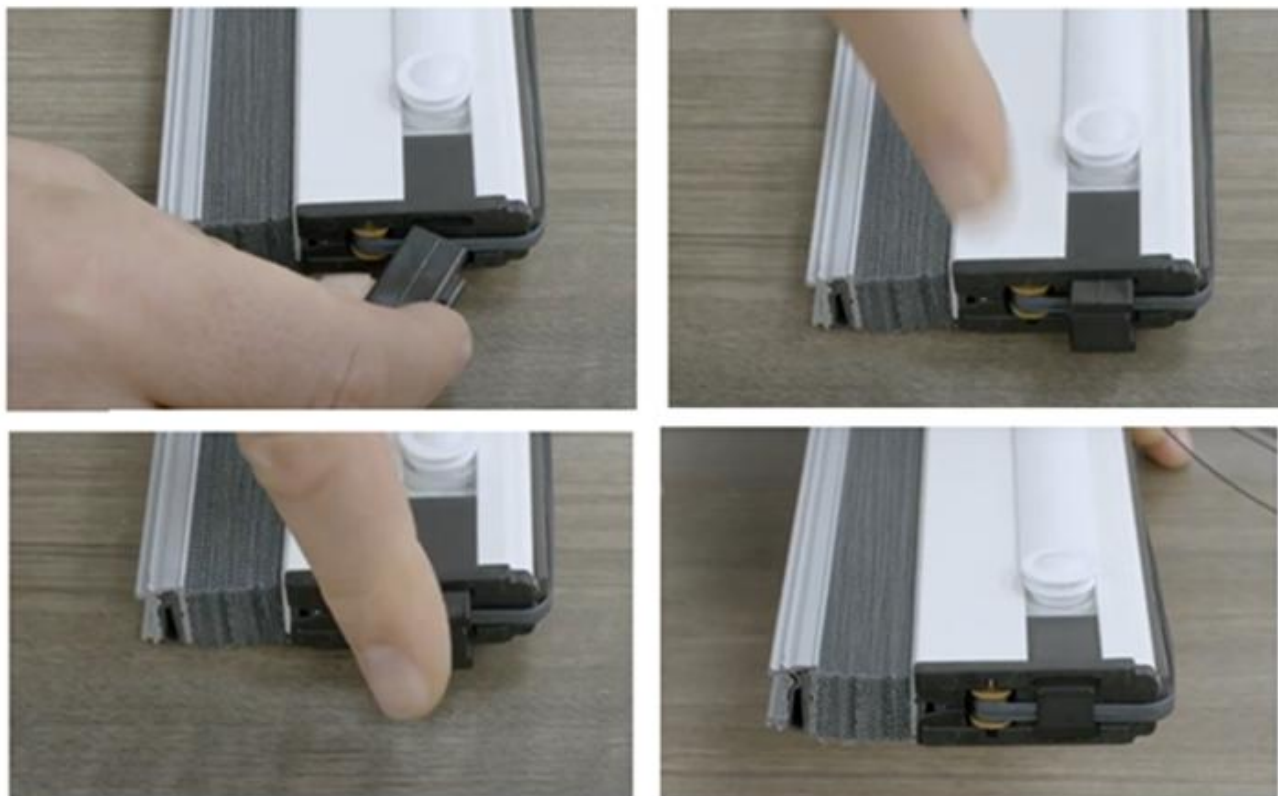

Fit the plastic component from below to the chambers of the lower carriage under the moving rail. The cords must be under the plastic!


### 2.2.10. Inserting and fastening the insect screen KIT

Insert both packets with the screen KIT in the upper and lower profiles. Move both packets with the screen to the side guide profiles. Push both packets with the screens to side profiles, until they fit to their desired places (all the way). Always start pushing from the bottom.


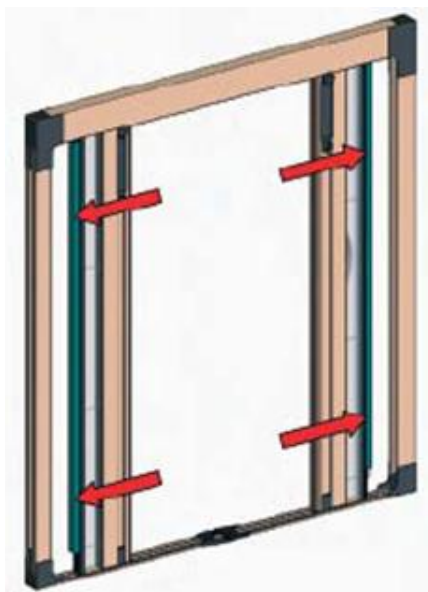


### 2.2.11. Inserting the cord stops

In the lower part, push the cord stops to their desired places in the central plastic part, see below. The lower cords have been manufactured to approximate lengths. If needed, redo the knot.

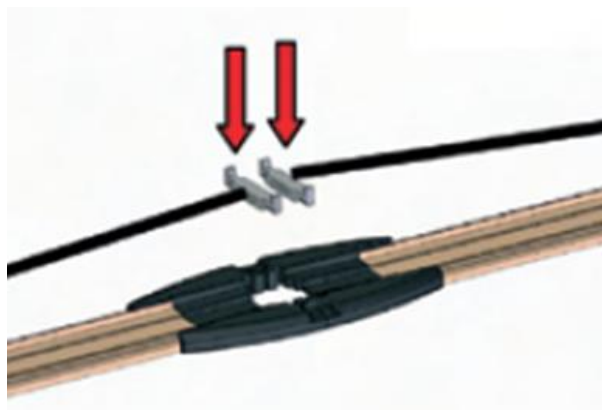


Insert the knots of the upper cords to the dedicated places in the cursors (black plastic part). The right-side cord is to be inserted in the left cursor, the left-side cord is to be inserted to the right cursor.

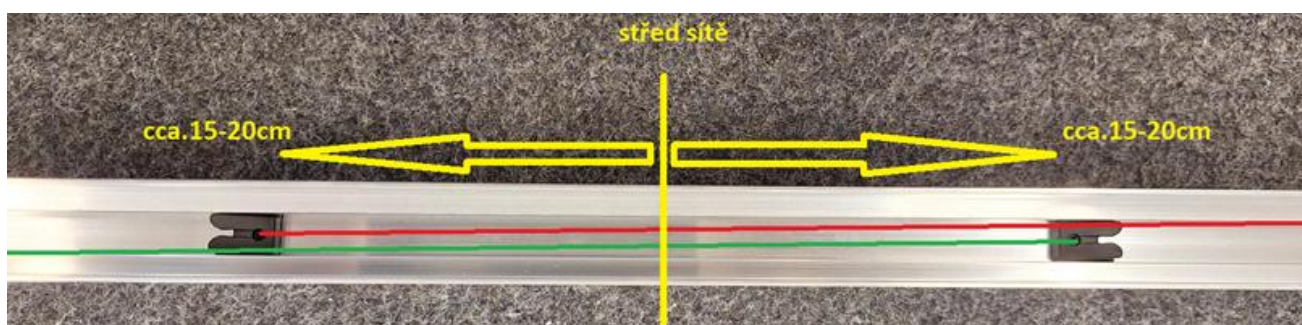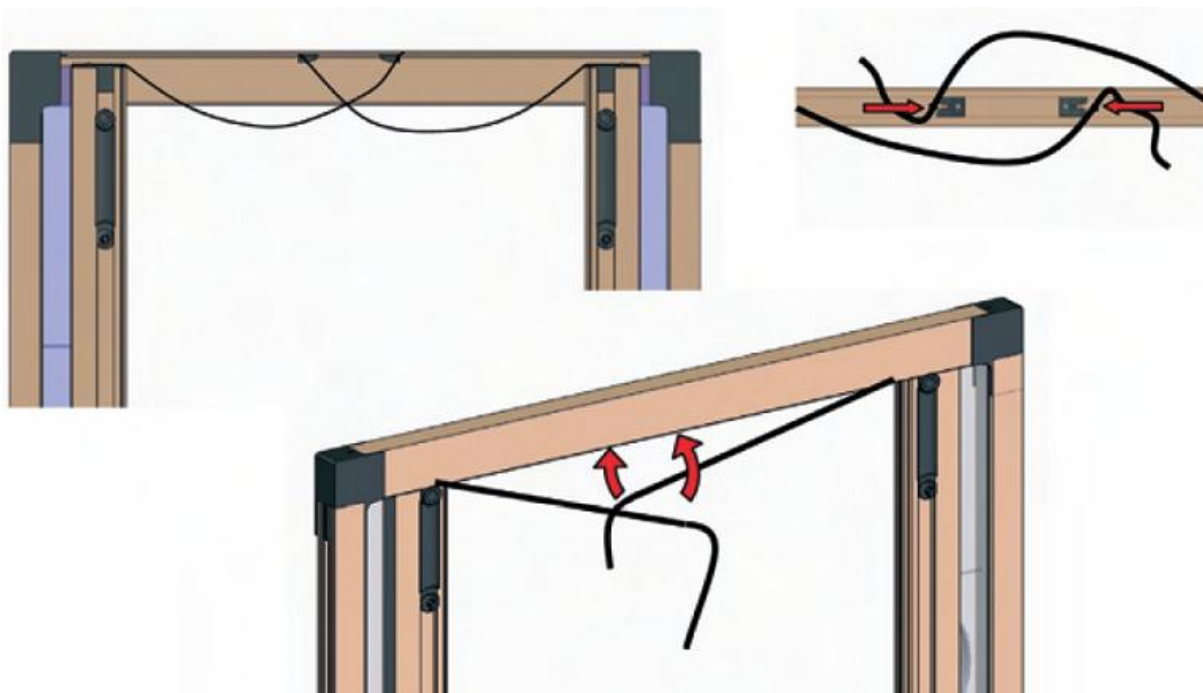

*střed sítě – screen centre*

### 2.2.12. Adjusting the cord


Use the Allen key to loosen the cursor screws. Tighten the cords by shifting each cursor to the side profiles and then tighten the screws by the Allen key. Check movement of both screen parts. Having completed the screen adjustment, cut the excess cord.

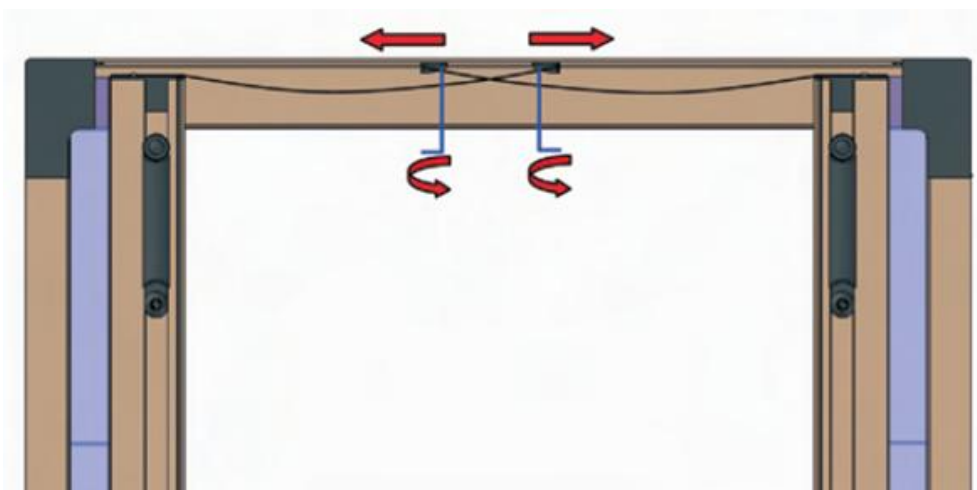


### 2.2.13. Plastic parts with springs

This component is recommended for doors that are not at right angles. If the door is at right angles, it is not necessary to use it.

Push the plastic profiles with springs to the upper part of the KIT profile. Slightly push the plastic part towards the upper profile edge and fasten with screws. The plastic profile must be elastic.

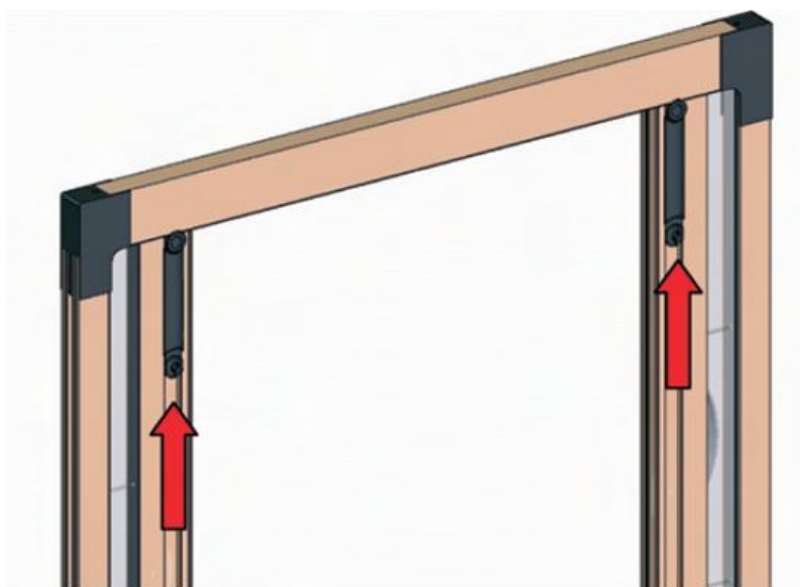

### 2.2.14. Testing the correct operation

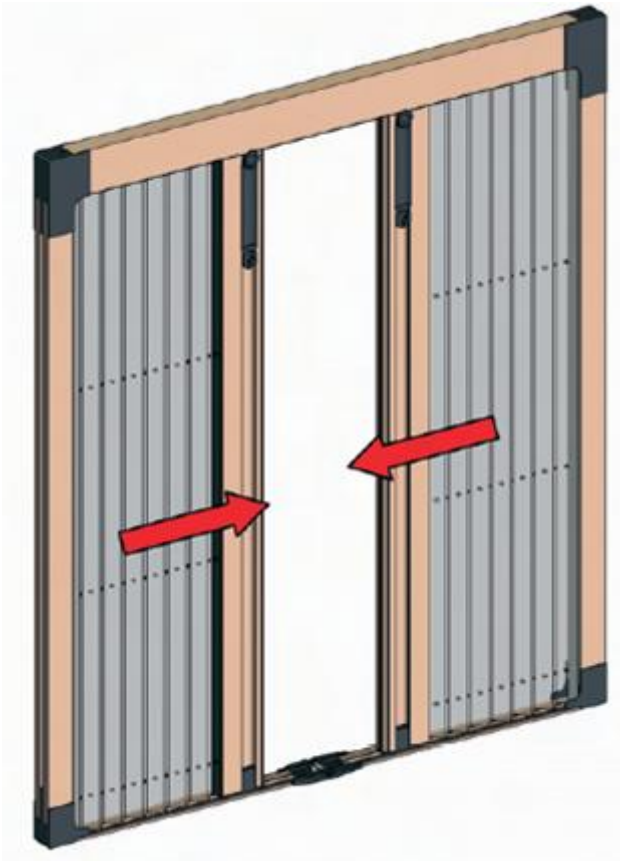

### 2.2.15. Covering the central plastic part

